

Denna armatur måste rengöras för hand.

Använd inte starka rengöringsmedel eller slipmedel som kan skada ytan. Armaturen måste vara avstängd vid rengöring.

### **Följ markeringen för jord**

Armaturen ska bara sättas in åt ett håll. Det skall gå lätt att låsa armaturen i skenan.

Tvinga inte armaturen på plats, detta kan skada adaptern.

The lamp must be cleaned by hand. Do not use strong and grinding cleaners which may damage the surface. The lamp must be turned off when cleaned.

### **Follow the polarity line**


The lamp can only be inserted one way. It should be easy to lock the lamp in place.

Do not force the lamp into place or this can damage the adaptor.



230VAC

50/60Hz

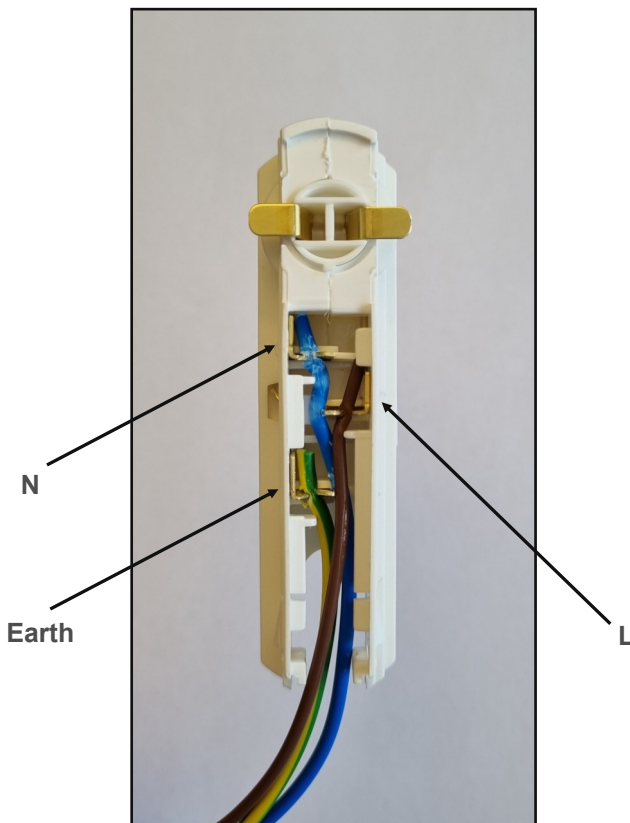

Adaptorn ska kopplas till ljuskällan enligt dess markeringar på plasthöljet.

6 A, 250 V, Säkerhetsklass I

Max. dragstyrka 50 N

Max. vridmoment 2,5 Nm

Används med tvinnad kabel 0,5 -1 mm<sup>2</sup> Spåranslutning.

Ledarna trycks in i kopplingarna av kopplingslocket.

The adaptor should be connected to the light source according to its markings on the plastic cover.

6 A, 250 V, Safety class I

Max. pull strength 50 N

Max. torque 2,5 Nm

To be used with stranded wire 0,5-1 mm<sup>2</sup> Slot connection.

The conductors are pressed into the connectors by the connector lid.



230VAC

50/60Hz